



Pro Edition Monster Jam Mini Hoop **ASSEMBLY MANUAL**

Congratulations on your new Tekk® Pro Edition Monster Jam Mini Hoop!
This Assembly Manual will guide you through the set-up of your Tekk® Mini Hoop.

! WARNING


Do not hang on the rim.
It may result in damage to personal property and/or injury.

Parts:




1 Attach black metal door clips

Place each clip against the back of the backboard and insert the screws through the front of the backboard.

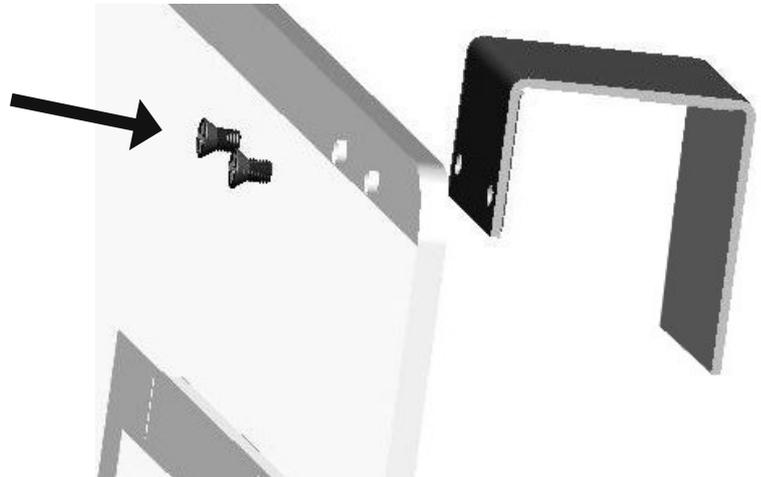


2 Attach rim to the backboard

Install the heads of the screws from the backside of the backboard through the metal plate and white silicone pad, then through the backboard and the rim. (Make sure the silicone pad is between the backboard and the black side of the metal plate.) Then attach the nuts on the front side of the rim.

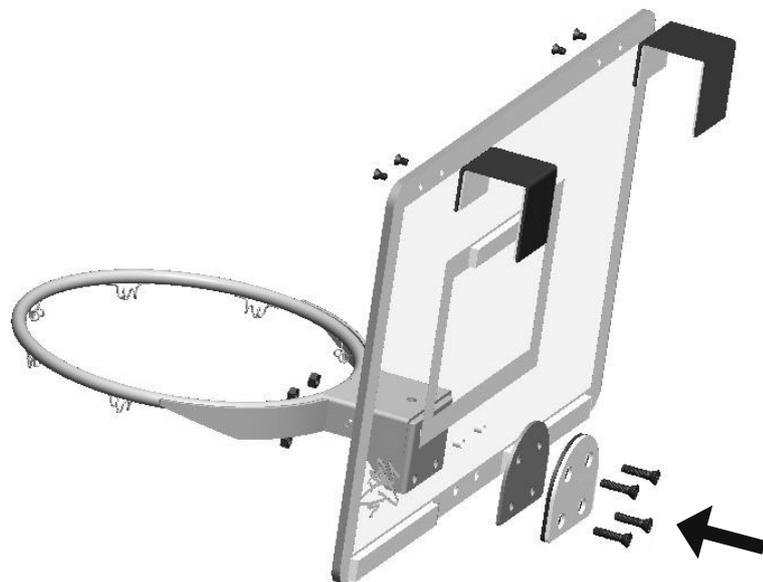

THIS IS VERY IMPORTANT. DO NOT INSTALL THE NUTS ON THE BACK SIDE OF THE BACKBOARD OR THEY WILL PROTRUDE AND SCRATCH YOUR DOOR.

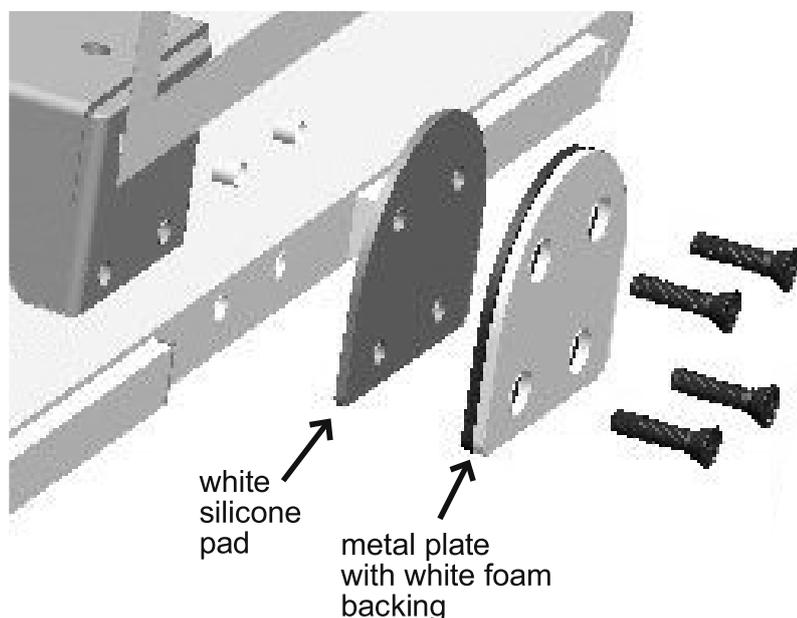

3 Attach net to rim

4 Pump the ball

5 Hang it on the door

6 You're ready to play